


1.
**CONNECT THE CABEL TO THE SOCKET ON THE RI-
GHT . BE AWARE OF COLOR SCHEME! LEFT
SOCKET MUST BE FREE**

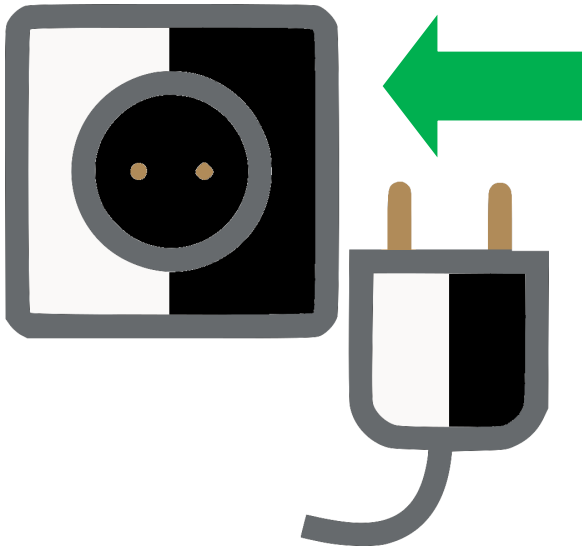

*MUST BE CONNECTED FOR THE
CEILING LIGHTS TO BE ON*

2.
**TURN ON THE POWER BANK
(Hold the button until the screen
activates)**



**THE SCREEN SHOWS THE % OF CHARGE OF THE
POWER BANK AND FOR HOW MANY HOURS THE
POWER IS LEFT**

3.
**„AC ON“ Must be on in order to use
ceiling lights. Make sure the fuses are on.**



„USB ON“ - TURNS ON USB SOCKETS

**USE ELECTRICITY SPARINGLY!!! HOUSEHOLD APP-
LIANCES WITH HIGH CONSUMPTION ARE NOT ALLO-
WED.**