


GROTHE lisa kellanupp- saatja programmeerimine

Uute saatjate programmeerimine (LEARN funktsioon). Me soovime saatjate ja vastuvõtjate programmeerimine enne nende paigaldamist seinale! Hoidke nuppu T1 u. 3 sekundit, kuni roheline LED 1 süttib! Vajutage korraks uue saatja nuppu. Vastuvõtja esitab vastuvõtmise kinnituseks meloodia ja LED 1 kustub. Vajadusel seadke teine meloodia, kasutades nuppu T2 (vt ülal)! Kui saatjat ei tuvastata, hakkab LED 1 vilkuma umbes pärast. 15 sek. ja lülitub välja veel 10 sekundi pärast. Siis korrake protsessi.

Programming new transmitters (LEARN function). We recommend programming transmitters and receivers before they are fixed on the wall! Hold down button T1 for approx. 3 seconds until the green LED 1 goes on! Press the button on the new transmitter briefly. The receiver plays a melody as confirmation of receipt, and LED 1 goes out. If required, set a different melody using button T2 (see above)! If no transmitter is detected, LED 1 starts to flash after approx. 15 sec. and switches off after another 10 sec. Then repeat the process.

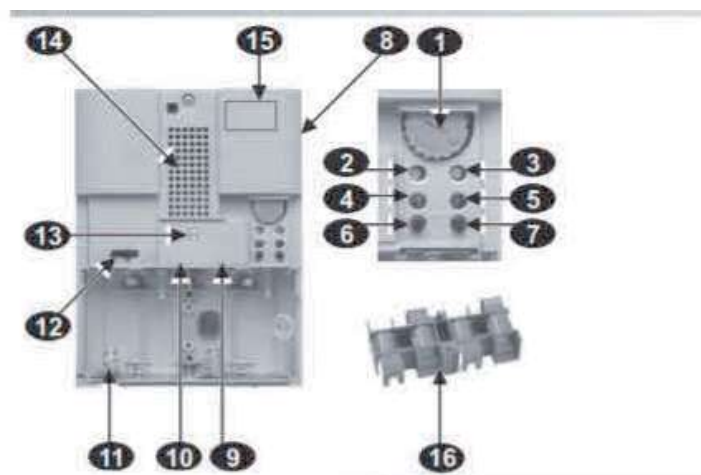

MISTRAL 300 M

- Receiver**
1. Volume control
 2. LowBatt LED for receiver
 3. LowBatt LED for transmitter
 4. Display LED for programming
 5. Display LED for MUTE function
 6. Button for programming
 7. Button for selection of melodies
 8. 9 Volt socket
 9. Terminal block, safety extra-low voltage. See chapter "Installation."
 10. Cable feedin
 11. Battery compartment
 12. Switch for turning the ring tone or the flash on/off
 13. Mounting point for terminal cover
 14. Loudspeaker
 15. Flash
 16. Battery adapter

