



GREENDECK INSTALLATION MANUAL




- 1** Start with placing support beams on firm ground of your choice. The support beams have to be placed with 35 - 40 cm space between them. In case you are going to place some heavy weights on your terrace the space between support beams has to be 30 cm. Otherwise the max allowed distance is 40 cm!

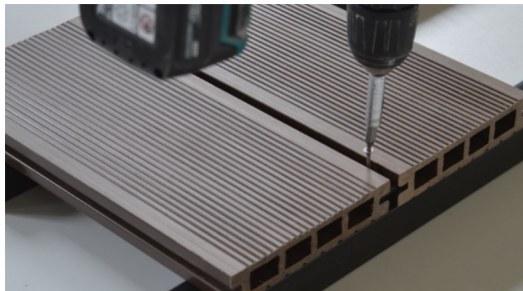


- 3** Boards are mutually connected using plastic fasteners and placing them in the groove of the board. Screw the plastic fasteners and make sure that the board fits. Do not attach fasteners bolting them too tight!

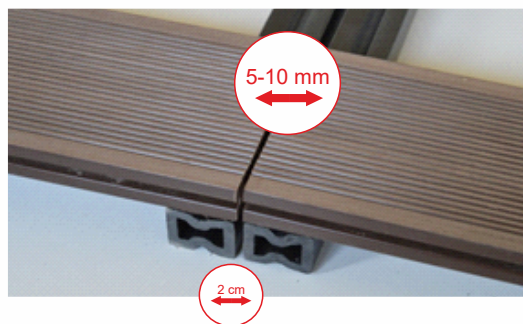

- 5** At the place where two decking boards collide they each have to end on separate support beam. Available space between support beam. Needed space between support beams at that place is 2 cm! The gap between decking boards has to be 5-10 mm!

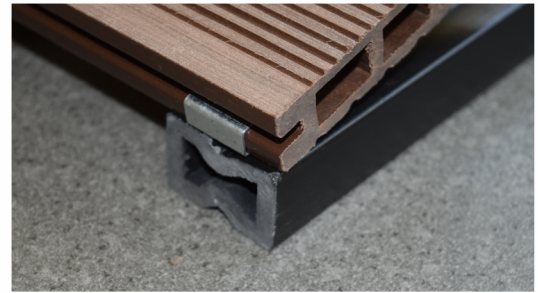

- 2** Attach the outer decking board with metal fastener, tightening it to the support beam with stainless steel screw. Before bolting it is necessary to place metal fastener at the midpoint of support beam.

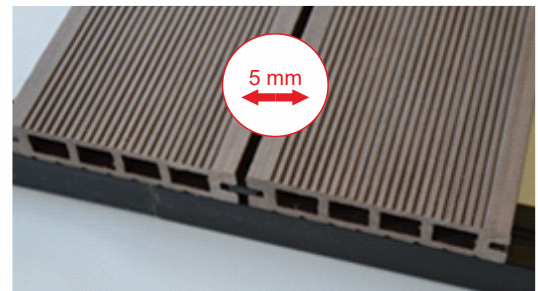

- 4** Remember that placing GreenDeck decking boards the gap between them has to be 5 mm! The reason for that is, that you could remove or replace board without damaging it.



- 6** Between the outer deck and immovable object (wall, house, etc.). Leave the space: - 15 mm if the board clings to the object in longitudinal direction and 7 mm if the board is adhering to the object width direction.



- 7** Finally finish the terrace with GreenDeck skirting, fastening it with stainless steel screws!

**7 steps
to perfect
terrace!**