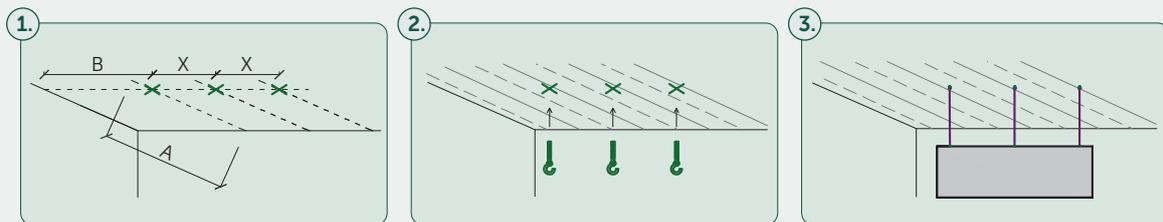


## BAFFLE INSTALLATION GUIDELINES

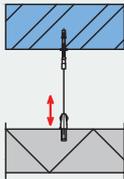
### Baffle installation steps

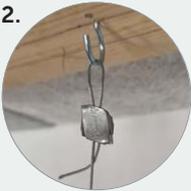
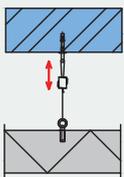
1. Take your time to determine the layout of the baffle panels on the ceiling. Mark the hook screw positions so that they match the spacing of the baffle panel hangers and ensure the suspension cables remain vertical.
2. Install the hook screws in the ceiling using fasteners suitable for the ceiling type. In plasterboard ceilings, make sure the hooks are fixed into a load-bearing structure.
3. Hang the Baffle panels in the hook screws.

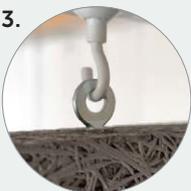
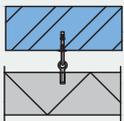


### Suspension options

The installation steps above apply to all suspension options. Select the preferred suspension method:

- 


**1. Cable gripper (adjustment at the baffle)**  
Integrated 1.5 mm suspension wires (max length 2 m). Height adjustment is made directly at the baffle using cable grippers. The ceiling connection is made with hooks.
- 


**2. Wire suspension (adjustment at the ceiling)**  
Integrated 1.5 mm suspension wires (max length 2 m). Wires are fixed to M6 eyebolts in the baffle, and the height adjustment is made at the ceiling using wire suspension.
- 


**3. Direct fixing (no wires)**  
Baffle panels mounted directly to the ceiling structure with hooks engaging into M6 eyebolts in the panel. Provides rigid installation without suspension wire or height adjustment.

### ! Baffle panels need to be handled with care. Follow these guidelines to avoid damage:

1. Allow the panels to acclimatize to ambient conditions before installation.
2. Store the panels flat, never on corners or edges, to avoid crushing.
3. When lifting into place, do not squeeze the panels to prevent edge damage.
4. A few weeks after installation, some dust may appear from the mounting process. Remove it with a vacuum cleaner fitted with a brush nozzle.