


GLUING CEWOOD DESIGN PANELS TO THE WALL


CEWOOD Design board are handmade, each board is manufactured with special care, according to the highest quality requirements. The panels can be used in finishing, design solutions, by gluing them to a preformed surface. The panels are aesthetically attractive, create a fantastic and modern design of the room, as well as improve the acoustics and indoor climate. The panels are produced exclusively from raw materials of natural origin: wood shavings, cement and water.

Gluings


- The wall must be prepared for gluing, load-bearing, clean, dry and primed. ①
- CEWOOD panels are glued to the wall using mounting glue. The choice of glue is determined by the type of backing. A certified low-emission glue in accordance with EMICODE EC1 or an equivalent standard should be used. For example, Soudal Fix All High Tack for wooden surfaces or Pattex Montage Express for masonry or concrete surfaces. These types of glue ensure low emissions and comply with requirements for healthy indoor environments. ②
- It is easiest to apply the glue with a glue gun by applying the glue in a snake or dot pattern on the entire perimeter of the decorative panel. Do not apply glue evenly across the panel! ③
- The glue drying time is in line with the glue manufacturer's instructions. ④
- It is recommended to create a supporting structure to fix the panels during drying, especially if there is a larger area with panels. You will find more detailed information at: www.cewood.com/video ⑤
- Dusting of the panels can be carried out using a brush-tipped vacuum cleaner.
If the panels are rubbed or dirty after installation, the material can be cleaned with a damp cloth.
If necessary, the colour of the panels can be restored by applying the appropriate colour tone to the panel part.

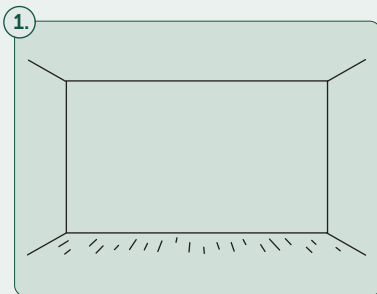


The wall is prepared for gluing.

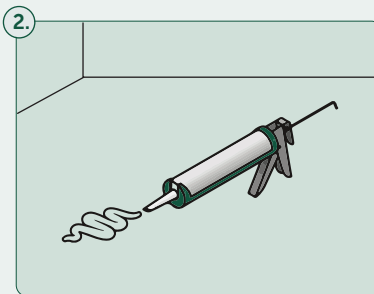


Mounting adhesive. Follow the manufacturer's instructions!

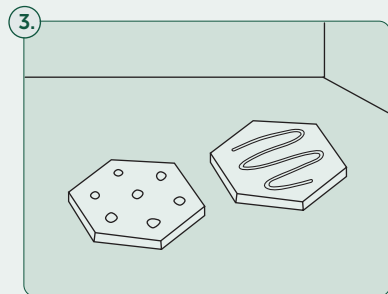


Apply the glue dotted or snake-shaped, not overall!

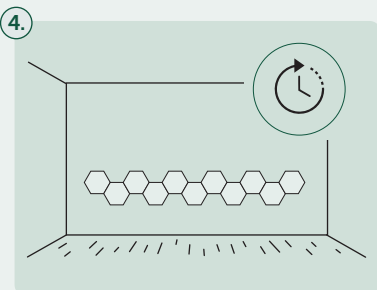

Allow the glue to dry according to the manufacturer's instructions!

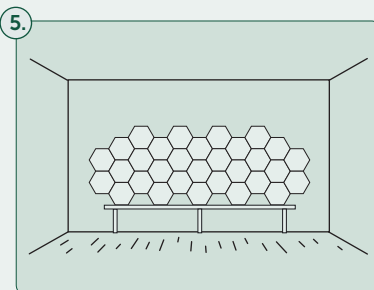

We recommend creating a supporting structure for the drying time if panel areas are large.

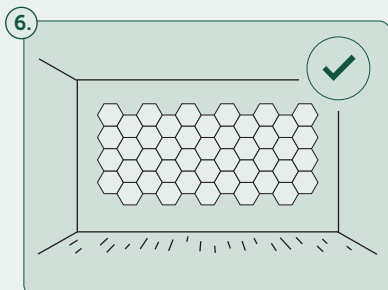

Panel gluing is complete!